


**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Pre Ch
	TV		TV/R
	Menu		Menu
	Q.Menu		D. Menu
	World		Shift + Guide

**Originalfernbedienung Ersatzfernbedienung**

	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	PR+		Ch +
	PR-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Exit		Exit
	Back		Back
	Mute		Mute
	i		Info
	Guide		Guide
	[≡]/Text		Text
	Folder		Format
	[-O-]		Subt





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
*/O	Sleep		
*/Q	Eject		
Netflix	Media		
Camera-Music-Ph	Options		
YouTube	3D		
[≡]..	List		
Lang	Dual		
Red	Red		
Green	Green		
Yellow	Yellow		
Blue	Blue		
Play	Play		
Rec	Rec		
Pause	Pause		
>>	>>		
<<	<<		
Stop	Stop		

