 

 

 

 

 

 

 

 

 

 

 

 

 

 

 

 



 



 

 

 

 

 

 

 

 
 
 

 

 

 

 

 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	CH.List		Smart / List
	Recall		Back / Return
	Vol+		Vol+
	Vol-		Vol-
	PIC.Mode		Picture / Format









 

 



 



 





 

 





 

Originalfernbedienung Ersatzfernbedienung

	S.Mode		Sound / Title
	CH+		CH+ / Page+
	CH-		CH- / Page-
	Source		AV / Input / RDS
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	Menu		Menu / Home
	Rec		Rec / Rec Mode
	Timeshift		Display / Media
	Timer		Shift + Sleep / Timer
	Rec.List		Shift + Rec / Rec Mode
	Red/DVD Setup		Red / Netflix / Search
	Green/Repeat		Green / APP / Repeat



 


**Originalfernbedienung    Ersatzfernbedienung**

	Yellow/Languag		Yellow / YouTube / Repeat
	Blue/DVD Menu		Blue / Prime Video / Random
	Title/Aspect		Guide / EPG / -/--
	Zoom/Tv/Radio		TV/Radio /
	Sleep		Sleep / Timer
	Subtitle		Subtitle / EQ
	Prog/Index		D.Menu / Top
	A-B/Reveal		Setup / OPT /
	Step/Audio		Audio / Lang I/II
	Info/Display		Info / Angle
	Text		Text / Goto
	Eject		Eject / Surround
	Size		Zoom / Size
	Play		Play / Slow
	Subpage		Fav / Marker / PC
	Pause		Pause / Step / Freeze
	Hold		Shift + Stop / Hold

Hold

**Originalfernbedienung    Ersatzfernbedienung**

	Stop		Stop / Hold
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+

