

 
 

 





 









 

 



 





 



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	Recall		Back
	Vol+		Vol +
	Vol-		Vol -
	Nicam		Dual

Originalfernbedienung Ersatzfernbedienung

	Sleep		Sleep
	Display		Info
	CH+		Ch +
	CH-		Ch -
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Aspect		Format
	Source		AV
	P.Mode		Shift + Format
	S.Mode		Shift + Dual
	Exit		Exit
	Menu		Menu
	Media		Media
	Play / Pause		Play


 






Originalfernbedienung **Ersatzfernbedienung**

	Play / Pause		Pause
	I<<		I<<
	>>I		>>I
	Rec		Rec
	Stop / Hold		Stop
	<< / Index		<<
	>> / Size		>>
	Text		Text
	FAV		Pre Ch
	FAV-	 + 	Shift + Down
	FAV+	 + 	Shift + Up
	Reveal		Smart
	Cancel	 +  + 	Shift + Exit
	Subpage	 +  + 	Shift + Subt
	Subtitle		Subt
	Red / TV/Radio		Red
	Green		Green

Originalfernbedienung **Ersatzfernbedienung**

	Yellow		Yellow
	Blue		Blue

