



**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	ASPECT		Format
	P.C.		Pre Ch
	MENU		Menu
	SOURCE		Shift + AV
	Up		Up

**Originalfernbedienung    Ersatzfernbedienung**

	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	Exit		Exit
	Display		Info
	Vol +		Vol +
	Vol -		Vol -
	CH +		Ch +
	CH -		Ch -
	Sound		Dual
	PIC		Shift + Format
	NICAM		Media
	SLEEP		Sleep
	TV		Smart
	AV		AV
	HDMI		Shift + Media




**Originalfernbedienung Ersatzfernbedienung**

	SCART1		Subt
	Y.PB.PR	 + 	Shift + Subt
	RECALL		Back
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Reveal		Play
	Hold		Pause
	List		List
	Index		Stop
	Subpage		Rec
	Size		3D
	Auto		Guide
	Text		Text

**Originalfernbedienung Ersatzfernbedienung**


