



Originalfernbedienung Ersatzfernbedienung

	Power Tv		Power
	NET		Media
	[i+]		Info
	FAV		Shift + Pre Ch
	ATV		Smart
	DTV		D. Menu
	SAT		Shift + Media
	Radio		TV/R
	Power Source		Shift + Power
	<< Source		Shift + <<
	Play Source		Play
	>> Source		Shift + >>
	USB Rec		Shift + Rec
	Rec Source		Rec
	Rec Stop		Shift + Stop
	Stop Source		Stop
	Ready/Time Shift		Options

 








 















 
 
 

 
 
 

 
Originalfernbedienung Ersatzfernbedienung

	←		Shift + Left
	→		Shift + Right
	Pause		Pause
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Pre Ch
	Source		AV
	I/II/I+II/▼/O		Dual
	[<>]		Format





Originalfernbedienung Ersatzfernbedienung

	AV Mode		Shift + AV
	Eco		Shift + 3D
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	P+		Ch +
	P-		Ch -
	[≡]		Text
	3D		3D
	End		Exit
	EPG		Guide
	Back		Back
	Menu		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left

Originalfernbedienung Ersatzfernbedienung

	OK		Ok
	>>		>>
	<<		<<
	>>		>>
	<<		<<
	[...]		Subt
	[≡?]		List
	[≡o]		Sleep
	[≡+]		Eject
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

