



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	OPC		Smart
	Sleep		Sleep
	Select		Shift + Ok
	[i+]		Info
	[[<>]]		Format
	AV Mode		Shift + AV
	Mute		Options
	Play/Pause		Shift + Options
	Card		Media
	REC Stop		Rec
	3D-Y/C		Shift + 3
	1		1
	2		2
	3		3
	4		4
	5		5

Originalfernbedienung Ersatzfernbedienung

	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Pre Ch
	DTV		TV/R
	[...]		Subt
	[≡?]		3D
	[≡i]		Shift + Info
	[≡]		Text
	Sound		Dual
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +
	P-		Ch -



