


 

 

 

 





 





 







 

 


 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Pre Ch
	Input		AV
	Tv		TV/R
	PC		Smart
	AV Mode		3D

Originalfernbedienung Ersatzfernbedienung

	Sleep		Sleep
	Vol+		Vol +
	Vol-		Vol -
	Freeze		Shift + Media
	View Mode		Media
	CH+		Ch +
	CH-		Ch -
	Surround		Dual
	MPX		Format
	Display		Info
	Menu		Menu
	Exit		Exit
	Return		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left




Originalfernbedienung Ersatzfernbedienung

ENTER	Enter	OK	Ok
R	Red	A	Red
G	Green	B	Green
Y	Yellow	C	Yellow
B	Blue	D	Blue
[≡]	[≡]	REPEAT TEXT	Text
[...]	[...]	AD SUBT	Subt
USB	USB	SETTINGS OPT	Options
■	Stop	■	Stop
[≡◆]	[≡◆]	DISC NAV LIST	List
[≡+]	[≡+]	-/-/ GUIDE	Guide
<<	<<	<<	<<
>>	>>	>>	>>
[≡?]	[≡?]	E-MANUAL D.MENU	D. Menu
[≡o]	[≡o]	ZOOM ▲	Eject
	Pause		Pause
▶	Play	▶	Play

Originalfernbedienung Ersatzfernbedienung

