




































Originalfernbedienung Ersatzfernbedienung

	Operate		Power
	On Screen		Display / Media
	Setup		Setup / OPT /
	Open / Close		Eject / Surround
	Dimmer		Mute / Dimmer
	Gamma		Picture / Format
	Mode		Smart / List
	Marker		Fav / Marker / PC
	Zoom		Zoom / Size
	Subtitle		Subtitle / EQ
	Angle		Info / Angle
	Audio		Audio / Lang I/II
	Title		Sound / Title
	Up		Up
	Menu		Menu / Home
	Left		Left
	Right		Right

Originalfernbedienung Ersatzfernbedienung


































	Return		Back / Return
	Down		Down
	Enter		OK
	1		1
	2		2
	3		3
	Repeat		Green / APP / Repeat
	4		4
	5		5
	6		6
	A-B Repeat		Yellow / YouTube / Repeat
	7		7
	8		8
	9		9
	Skip >>I		>>I / Preset+
	Clear		Exit / Cancel / Clear
	0		0




Originalfernbedienung Ersatzfernbedienung

	Operate		Power
	On Screen		Display / Media
	Setup		Setup / OPT /
	Open / Close		Eject / Surround
	Dimmer		Mute / Dimmer
	Gamma		Picture / Format
	Mode		Smart / List
	Marker		Fav / Marker / PC
	Zoom		Zoom / Size
	Subtitle		Subtitle / EQ
	Angle		Info / Angle
	Audio		Audio / Lang I/II
	Title		Sound / Title
	Up		Up
	Menu		Menu / Home
	Left		Left
	Right		Right

Originalfernbedienung Ersatzfernbedienung

	Return		Back / Return
	Down		Down
	Enter		OK
	1		1
	2		2
	3		3
	Repeat		Green / APP / Repeat
	4		4
	5		5
	6		6
	A-B Repeat		Yellow / YouTube / Repeat
	7		7
	8		8
	9		9
	Skip >>I		>>I / Preset+
	Clear		Exit / Cancel / Clear
	0		0



