

 







 

 

 

 

 






 

 

 









 

 

 



 
 
 





 

 
 
 












Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Pscan		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Disc CD		Smart
	Play CD		Play
	Pause CD		Pause
	I<< CD		I<<
	>>I CD		>>I

Originalfernbedienung Ersatzfernbedienung

	Stop CD		Stop
	Repeat A-B CD		Text
	Intro CD		Ok
	Deck A		Format
	> Deck A		Shift + Play
	>> Deck A		>>
	Pause Deck A		Shift + Pause
	Rec Deck A		Rec
	Deck B		3D
	< Deck B		Left
	<< Deck B		<<
	Stop Deck B		Shift + Stop
	Preset		Menu
	User		Guide
	File		Pre Ch
	T.Mon		TV/R
	Display		Shift + Info



