

 

 


 







 
 
 
 

 

 

 

 

 




 




Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Rec PVR		Rec
	List PVR		Smart
	Mute		Mute
	EPG		Guide
	Audio		Dual
	Info		Info
	DTV/VCR		Media
	TTX		Text
	Subtitle		Subt
	Menu		Menu
	Exit		Exit
	Favourite		Pre Ch
	Tv/Radio		TV/R
	CH+		Ch +
	CH-		Ch -
	Up		Up

Originalfernbedienung Ersatzfernbedienung

	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Back





Originalfernbedienung Ersatzfernbedienung

 
 



 
 

	Goto		AV
	<<		<<
	>>		>>
	<<		<<
	>>		>>
	Play		Play
	Pause		Pause
	Stop		Stop
	Repeat		Shift + Text
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

Originalfernbedienung Ersatzfernbedienung

 










 
 















Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Rec PVR		Rec
	List PVR		List
	Mute		Mute
	EPG		Guide
	Audio		Dual
	Info		Info
	DTV/VCR		Media
	TTX		Text
	Subtitle		Subt
	Menu		Menu
	Exit		Exit
	Favourite		Pre Ch
	Tv/Radio		TV/R
	CH+		Ch +
	CH-		Ch -
	Up		Up

Originalfernbedienung Ersatzfernbedienung

	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Back





Originalfernbedienung Ersatzfernbedienung

	Goto		Options
	<<		<<
	>>		>>
	<<		<<
	>>		>>
	Play		Play
	Pause		Pause
	Stop		Stop
	Repeat		Shift + Text
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

Originalfernbedienung Ersatzfernbedienung

