





































Originalfernbedienung Ersatzfernbedienung

On/Off		Power
Mute		Mute / Dimmer
Store		Play / Slow
Aft/Caf		Pause / Step / Freeze
Txt Stop		Stop / Hold
Game Coo		Rec / Rec Mode
Tune-		<< / Tune-
Tune+		>> / Tune+
Tone+		>>I / Preset+
Reveal		Sound / Title
Menu audio		Audio / Lang I/II
Subt.List		Subtitle / EQ
Update		Picture / Format
Txt Expand		Zoom / Size
Sleep Timer		Sleep / Timer
Return TV		TV/Radio /
Menu video		D.Menu / Top

Originalfernbedienung Ersatzfernbedienung

Text		Text / Goto
TV/AV		AV / Input / RDS
Menu		Menu / Home
Menu Up		Up
Info		Info / Angle
Menu Left		Left
OK Enter		OK
Menu Right		Right
Menu Off		Exit / Cancel / Clear
Menu Down		Down
Back		Back / Return
Volume+		Vol+
Browse		Smart / List
Chan.Up		CH+ / Page+
Volume-		Vol-
Disp		Display / Media
Chan.Down		CH- / Page-



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
1	 1	Off/Tim	 Shift + Exit / Cancel / Clear
2	 2	Display	 Shift + Display / Media
3	 3	Search	 Shift + Red / Netflix /
4	 4		
5	 5		
6	 6		
7	 7		
8	 8		
9	 9		
Guide -/-- 1.	 Guide / EPG / -/--		
0/10	 0		
2.Fav P/C 2.	 Fav / Marker / PC		
Red	 Red / Netflix / Search		
Green	 Green / APP / Repeat		
Yellow	 Yellow / YouTube / Repeat		
Blue	 Blue / Prime Video / Random		
Mix Scan	 Shift + Goto Text / Goto		

Goto

