





 



 






 




 



 



 





 


 










 


 





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|--------------|
|  | Power |  | Power |
|  | Mute |  | Mute |
|  | Up / CH+ |  | Up |
|  | Up / CH+ |  | Ch + |
|  | Left / Vol- |  | Left |
|  | Left / Vol- |  | Vol - |
|  | Right / Vol+ |  | Right |
|  | Right / Vol+ |  | Vol + |
|  | Down / CH- |  | Ch - |
|  | Down / CH- |  | Down |
|  | Enter |  | Ok |
|  | Menu |  | Menu |
|  | Red / P.M |  | Red |
|  | Red / P.M |  | Format |
|  | Green / S.M |  | Green |
|  | Green / S.M |  | Shift + Dual |
|  | Yellow / FAV |  | Yellow |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|--------|
|  | Yellow / FAV |  | Pre Ch |
|  | Blue / SLP |  | Blue |
|  | Zoom |  | Eject |
|  | Freeze |  | Pause |
|  | Blue / SLP |  | Sleep |
|  | DSP / CAPS |  | Info |
|  | Recall |  | Back |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|-------------|--|---------------|
| | -/-- | | Guide |
| | Input | | AV |
| | PIP | | Smart |
| | POP | | Media |
| | PIP-POS | | Shift + Smart |
| | M.Win | | TV/R |
| | Active-Win | | Shift + TV/R |
| | Timer | | Shift + AV |
| | Stereo | | Dual |
| | Swap | | Exit |
| | Text | | Text |
| | Text Mix | | Shift + Text |
| | Text Hold | | Stop |
| | Text Update | | Options |
| | Text Reveal | | Subt |
| | Text Size | | Shift + Eject |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

