
 
 












 










 











Originalfernbedienung Ersatzfernbedienung

	Source		AV / Input / RDS
	Power		Power
	Theatre		Sleep / Timer
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Sync Menu		D.Menu / Top
	I-Manual		I<< / Preset-
	Stop		Stop / Hold
	>>		>>  / Preset+
	I-Manual		TV/Radio /
	Scene		Picture / Format
	[+]		Zoom / Size
	Digital/Analog		Smart / List
	Exit		Exit / Cancel / Clear
	Internet/Video		Display / Media
	FAV		Fav / Marker / PC







 




 



 



Originalfernbedienung Ersatzfernbedienung

	Guide		Guide / EPG / -/--
	Up		Up
	[i+]		Info / Angle
	Left		Left
	OK		OK
	Right		Right
	Return		Back / Return
	Down		Down
	Options		Setup / OPT /
	Home		Menu / Home
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	1		1
	2		2
	3		3





Originalfernbedienung Ersatzfernbedienung

	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Text		Text / Goto
	0		0
	Subtitle		Subtitle / EQ
	Vol+		Vol+
	Pr+		CH+ / Page+
	Mute		Mute / Dimmer
	Audio		Audio / Lang I/II
	Vol-		Vol-
	Pr-		CH- / Page-

Originalfernbedienung Ersatzfernbedienung