



 

 



 

 
 
 







 

 









 
 










Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------|---|---------------------------|
|  | Eject |  | Eject / Surround |
|  | Tv Power |  | Shift + Power |
|  | Power |  | Power |
|  | Stereo/mono |  | Shift + Sound / Title |
|  | Name |  | AV / Input / RDS |
|  | Dimmer |  | Shift + Mute / Dimmer |
|  | Repeat |  | Green / APP / Repeat |
|  | Tv/Video |  | TV/Radio / |
|  | Clear |  | Exit / Cancel / Clear |
|  | Memory |  | Shift + D.Menu / Top Menu |
|  | Time |  | Sleep / Timer |
|  | Muting |  | Mute / Dimmer |
|  | Play Mode |  | Play / Slow |
|  | 1 |  | 1 |
|  | 1 TV |  | Shift + 1 |
|  | 2 |  | 2 |
|  | 2 TV |  | Shift + 2 |

 
 
 



 
 
Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|---|-----------------------------|
|  | 3 |  | 3 |
|  | 3 TV |  | Shift + 3 |
|  | Function |  | Shift + Setup / OPT / Tools |
|  | Audio |  | Audio / Lang I/II |
|  | 4 |  | 4 |
|  | 4 TV |  | Shift + 4 |
|  | 5 |  | 5 |
|  | 5 TV |  | Shift + 5 |
|  | 6 |  | 6 |
|  | 6 TV |  | Shift + 6 |
|  | Band |  | Picture / Format |
|  | Angle |  | Info / Angle |
|  | 7 |  | 7 |
|  | 7 TV |  | Shift + 7 |
|  | 8 |  | 8 |
|  | 8 TV |  | Shift + 8 |
|  | 9 |  | 9 |

 

 




 

 

 



 

 
 
 

 

 
 
 
 









Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------|---|-----------------------|
|  | 9 TV |  | Shift + 9 |
|  | Sound Field |  | Sound / Title |
|  | Subtitle |  | Subtitle / EQ |
|  | >10 |  | Guide / EPG / -/-- |
|  | >10 TV |  | Fav / Marker / PC |
|  | 0/10 |  | 0 |
|  | 0/10 TV |  | Shift + 0 |
|  | Enter |  | Shift + OK |
|  | Display |  | Display / Media |
|  | Vol+ |  | Vol+ |
|  | Vol+ Tv |  | Shift + Vol+ |
|  | Vol- |  | Vol- |
|  | Vol- Tv |  | Shift + Vol- |
|  | I<< |  | I<< / Preset- |
|  | I<< TV |  | Shift + I<< / Preset- |
|  | >>I |  | >>I / Preset+ |
|  | >>I TV |  | Shift + >>I / Preset+ |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|-------------------------|
|  | << |  | << / Tune- |
|  | >> |  | >> / Tune+ |
|  | Play/Select |  | Shift + Play / |
|  | Pause |  | Pause / Step / Freeze |
|  | Stop |  | Stop / Hold |
|  | DVD Display |  | Shift + Display / Media |
|  | DVD Top Menu |  | Menu / Home |
|  | Up |  | Up |
|  | DVD Menu |  | D.Menu / Top |
|  | Return |  | Back / Return |
|  | Left |  | Left |
|  | OK |  | OK |
|  | Enter TV |  | Shift + Down |
|  | Right |  | Right |
|  | DVD Setup |  | Setup / OPT / |
|  | AMP Menu |  | Shift + Menu / |
|  | Down |  | Down |

