 









 



 

 



 





 

 

 





 














 




















Originalfernbedienung Ersatzfernbedienung

	Source		AV / Input / RDS
	Power		Power
	Digital/Analog		Setup / OPT /
	Tv/Radio		TV/Radio /
	Sync Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	[i]/[?]		Info / Angle
	0		0






 














Originalfernbedienung Ersatzfernbedienung

	[≡]/Text		Text / Goto
	Google Play		Display / Media
	Netflix		Shift + Red / Netflix /
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Action Menu		D.Menu / Top
	Tv		Shift + 1
	Up		Up
	Guide		Guide / EPG / -/-
	Left		Left
	OK		OK
	Right		Right
	Back		Back / Return
	Down		Down
	Home		Shift + Menu / Home

 







Originalfernbedienung Ersatzfernbedienung

	Discover		Picture / Format
	Vol+		Vol+
	Recall		Fav / Marker / PC
	Prog+		CH+ / Page+
	Vol-		Vol-
	Mute		Mute / Dimmer
	Prog-		CH- / Page-
	Audio		Audio / Lang I/II
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	[...]		Subtitle / EQ
	I<<		I<< / Preset-
	Pause		Pause / Step / Freeze
	>>I		>>I / Preset+
	Help		Sleep / Timer
	Rec		Rec / Rec Mode

Originalfernbedienung Ersatzfernbedienung

	Stop		Stop / Hold
	Title List		Smart / List

