



Originalfernbedienung Ersatzfernbedienung

	Open/Close		Eject / Surround
	HDD		Shift + 7
	DVD		Shift + 2
	Power		Power
	1		1
	2		2
	3		3
	Prog+		CH+ / Page+
	4		4
	5		5
	6		6
	Prog-		CH- / Page-
	7		7
	8		8
	9		9
	Input		AV / Input / RDS
	Audio		Audio / Lang I/II

Originalfernbedienung Ersatzfernbedienung

	0		0
	Clear		Exit / Cancel / Clear
	TV/DVD		TV/Radio /
	Subtitle		Subtitle / EQ
	Angle		Shift + Info / Angle
	[≡]		Text / Goto
	Menu		Menu / Home
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	System Menu		Setup / OPT /
	Title List / Top Menu		D.Menu / Top
	Guide		Guide / EPG / -/-
	Timer		Sleep / Timer
	Up		Up
	Info		Info / Angle

 





Originalfernbedienung Ersatzfernbedienung

	Left		Left
	Enter		OK
	Right		Right
	Exit / Return		Back / Return
	Down		Down
	Display		Display / Media
	I<< / Page-		I<< / Preset-
	←·		Shift + Left
	·→		Shift + Right
	>>I / Page +		>>I / Preset+
	<< / <II / <I / Day-		<< / Tune-
	Play		Play / Slow
	Day + / I> / II> / >>		>> / Tune+
	TV Pause		Shift + Pause / Step / Step /
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Rec		Rec / Rec Mode

Originalfernbedienung Ersatzfernbedienung

	Rec Stop		Shift + Stop /
	DUB /HDD/DVD		Shift + 8
	Rec Mode		Shift + Rec / Rec Mode
	Zoom		Zoom / Size
	Vol+ Tv		Vol+
	Prog + Tv		Shift + CH+ /
	Power Tv		Shift + Power
	Play Mode		Smart / List
	Vol - Tv		Vol-
	Prog - Tv		Shift + CH- /
	Input Tv		Shift + AV / Input / RDS





Originalfernbedienung Ersatzfernbedienung

	Open/Close		Eject / Surround
	HDD		Shift + 7
	DVD		Shift + 2
	Power		Power
	1		1
	2		2
	3		3
	Prog+		CH+ / Page+
	4		4
	5		5
	6		6
	Prog-		CH- / Page-
	7		7
	8		8
	9		9
	Input		AV / Input / RDS
	Audio		Audio / Lang I/II

Originalfernbedienung Ersatzfernbedienung

	0		0
	Clear		Exit / Cancel / Clear
	TV/DVD		TV/Radio /
	Subtitle		Subtitle / EQ
	Angle		Shift + Info / Angle
	[≡]		Text / Goto
	Menu		Menu / Home
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	System Menu		Setup / OPT /
	Title List / Top Menu		D.Menu / Top
	Guide		Guide / EPG / -/-
	Timer		Sleep / Timer
	Up		Up
	Info		Info / Angle





Originalfernbedienung Ersatzfernbedienung

	Left		Left
	Enter		OK
	Right		Right
	Exit / Return		Back / Return
	Down		Down
	Display		Display / Media
	I<< / Page-		I<< / Preset-
	←		Shift + Left
	→		Shift + Right
	>>I / Page +		>>I / Preset+
	<< / <II / <I / Day-		<< / Tune-
	Play		Play / Slow
	Day + / I> / II> / >>		>> / Tune+
	TV Pause		Shift + Pause / Step / Step /
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Rec		Rec / Rec Mode

Originalfernbedienung Ersatzfernbedienung

	Rec Stop		Shift + Stop /
	DUB /HDD/DVD		Shift + 8
	Rec Mode		Shift + Rec / Rec Mode
	Zoom		Zoom / Size
	Vol+ Tv		Vol+
	Prog + Tv		Shift + CH+ /
	Power Tv		Shift + Power
	Play Mode		Smart / List
	Vol - Tv		Vol-
	Prog - Tv		Shift + CH- /
	Input Tv		Shift + AV / Input / RDS





Originalfernbedienung Ersatzfernbedienung

	Open/Close		Eject / Surround
	HDD	 + 	Shift + 7
	DVD	 + 	Shift + 2
	Power		Power
	1	 	1
	2	 	2
	3	 	3
	Prog+	 	CH+ / Page+
	4	 	4
	5	 	5
	6	 	6
	Prog-	 	CH- / Page-
	7	 	7
	8	 	8
	9	 	9
	Input		AV / Input / RDS
	Audio	 	Audio / Lang I/II

Originalfernbedienung Ersatzfernbedienung

	0	 	0
	Clear	  	Exit / Cancel / Clear
	TV/DVD		TV/Radio /
	Subtitle	 	Subtitle / EQ
	Angle	 +  	Shift + Info / Angle
	[≡]	 	Text / Goto
	Menu	 	Menu / Home
	Red	 	Red / Netflix / Search
	Green	 	Green / APP / Repeat
	Yellow	 	Yellow / YouTube / Repeat
	Blue	 	Blue / Prime Video / Random
	System Menu	 	Setup / OPT /
	Title List / Top Menu	 	D.Menu / Top
	Guide		Guide / EPG / -/-
	Timer	 	Sleep / Timer
	Up		Up
	Info	 	Info / Angle



 





Originalfernbedienung Ersatzfernbedienung

	Left		Left
	Enter		OK
	Right		Right
	Exit / Return		Back / Return
	Down		Down
	Display		Display / Media
	I<< / Page-		I<< / Preset-
	←·		Shift + Left
	·→		Shift + Right
	>>I / Page +		>>I / Preset+
	<< / <II / <I / Day-		<< / Tune-
	Play		Play / Slow
	Day + / I> / II> / >>		>> / Tune+
	TV Pause		Shift + Pause / Step / Step /
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Rec		Rec / Rec Mode

Originalfernbedienung Ersatzfernbedienung

	Rec Stop		Shift + Stop /
	DUB /HDD/DVD		Shift + 8
	Rec Mode		Shift + Rec / Rec Mode
	Zoom		Zoom / Size
	Vol+ Tv		Vol+
	Prog + Tv		Shift + CH+ /
	Power Tv		Shift + Power
	Play Mode		Smart / List
	Vol - Tv		Vol-
	Prog - Tv		Shift + CH- /
	Input Tv		Shift + AV / Input / RDS

