






 








 




 
 
 


 


 






Originalfernbedienung Ersatzfernbedienung

	Stop/Eject		Stop
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10		Guide
	Speed+		Ch +
	Speed-		Ch -
	Tv/Dvd		TV/R
	Clear		Shift + Exit
	Stereo		Dual

Originalfernbedienung Ersatzfernbedienung

	Frm/Tim		Pre Ch
	Chap		Media
	Chp/Tim		Menu
	Search		Shift + TV/R
	Esc		Exit
	Disp		Info
	Dig/Ana		Options
	Cx		Subt
	Test		Text
	Side A		AV
	Side B		Format
	I<< Chapter Skip		I<<
	>>I Chapter Skip		>>I
	< Still Step		Left
	> Still Step		Right
	<<Scan		<<
	>>Scan		>>





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Play		Play
	<x3		Vol -
	Pause		Pause
	>x3		Vol +
	Rep.A		Red
	Rep.B		Green
	A.Mon		Yellow
	P.Run		Blue

