

 

 
 


 


 



 

 



 
 
 



 
 
 
 
 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	[i+]/[?]		Info
	A/B/[+]		TV/R
	Input/[+]		AV
	[]		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide

Originalfernbedienung Ersatzfernbedienung

	Recall		Back
	Timer/[≡i]		List
	Timer/[X]		Sleep
	Vol+		Vol +
	Vol-		Vol -
	Prog+		Ch +
	Prog-		Ch -
	(↔)		Dual
	Menu		Menu
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	[≡]		Text
	Red/Sound		Red
	Green/*		Green





Originalfernbedienung

Ersatzfernbedienung

	Yellow		Yellow
	Blue/[+]		Blue

Originalfernbedienung

Ersatzfernbedienung

