



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep
	VIDEO 1		Shift + 1
	DVD/LD		Shift + 4
	VIDEO 2		Shift + 2
	TV / SAT		Shift + 5
	VIDEO 3		Shift + 3
	AUX		Shift + 7
	PHONO		Shift + 6
	CD/SACD		Shift + 9
	MD/TAPE		Shift + 8
	TUNER		Shift + 0
	1		1
	2		2
	3		3
	4		4
	5		5




 








 





Originalfernbedienung Ersatzfernbedienung

	Enter 2		Shift + Ok
	6		6
	7		7
	8		8
	9		9
	0		0
	>10		Guide
	Enter		Ok
	D.Tuning		Smart
	D.Skip/CH/Presets		Ch +
	D.Skip/CH/Presets -		Ch -
	Display		Info
	MULTI CH / 2CH DIRECT		Media
	A.F.D.		Red
	2CH / Off		Green
	Mode-		Yellow
	Mode+		Blue





Originalfernbedienung Ersatzfernbedienung

	Test Tone		Text
	Main Menu		Menu
	Menu Left		Left
	Menu Right		Right
	-		Down
	+		Up
	Muting		Mute
	Master Vol+		Vol +
	Master Vol-		Vol -

Originalfernbedienung Ersatzfernbedienung

