

 





 

 


 
 





 

 

 

 





 

 



 

 
 
 

 

 
 
 

 

 



 

 

 

 

 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep / Timer
	Input TV		AV / Input / RDS
	Power TV		Shift + Power
	Program		TV/Radio /
	1		1
	2		2
	Repeat		Green / APP / Repeat
	Function+		CH+ / Page+
	3		3
	EQ		Shift + Subtitle / EQ
	4		4
	DSGX		Sound / Title
	5		5
	Function-		CH- / Page-
	6		6
	Zoom		Zoom / Size

Originalfernbedienung Ersatzfernbedienung

	7		7
	Dimmer		Shift + Mute / Dimmer
	8		8
	Time		Shift + Sleep / Timer
	9		9
	0		0
	0/Subtitle		Subtitle / EQ
	Audio		Audio / Lang I/II
	Angle		Info / Angle
	DVD Top Menu		Menu / Home
	DVD Menu		D.Menu / Top
	Setup		Setup / OPT /
	Display		Display / Media
	Muting		Mute / Dimmer
	Vol+		Vol+
	Vol-		Vol-
	Up		Up





Originalfernbedienung Ersatzfernbedienung

	Down		Down
	Right		Right
	Left		Left
	OK		OK
	I<</Preset-		I<< / Preset-
	Pause		Pause / Step / Freeze
	>>I/Preset+		>>I / Preset+
	<</Tuning-		<< / Tune-
	Play		Play / Slow
	>>/Tuning+		>> / Tune+
	Stop		Stop / Hold

Originalfernbedienung Ersatzfernbedienung