




 






 







 

 
 
 

 


 








 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	[]/[+]		TV/Radio /
	Input		AV / Input / RDS
	[=]		Text / Goto
	[X]/[o]		Zoom / Size
	[◆]		Picture / Format
	[?]/[i+]		Subtitle / EQ
	↔>		Smart / List
	[]/[=i]		Display / Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7

Originalfernbedienung Ersatzfernbedienung

	8		8
	9		9
	0		0
	-/--		Guide / EPG / -/--
	C		Fav / Marker / PC
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Menu		Menu / Home
	+		Up
	-		Down
	→←		OK
	Vol+		Vol+
	Vol-		Vol-
	Progr+		CH+ / Page+
	Progr-		CH- / Page-





Originalfernbedienung Ersatzfernbedienung

	Power VTR1		Shift + Power
	>> VTR1		>> / Tune+
	Play VTR1		Play / Slow
	<< VTR1		<< / Tune-
	Stop VTR1		Stop / Hold
	Pause VTR1		Pause / Step / Freeze
	Rec VTR1		Rec / Rec Mode
	Prog+ VTR1		Shift + CH+ /
	Prog- VTR1		Shift + CH- /

Originalfernbedienung Ersatzfernbedienung



