





 

 

 



 

 

 





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------------------|---|----------------------------|
|  | Power |  | Power |
|  | Sleep |  | Sleep / Timer |
|  | Display |  | Display / Media |
|  | Tuner Memory |  | Zoom / Size |
|  | Play Mode/Tuning Mode |  | TV/Radio / |
|  | Folder- |  | CH- / Page- |
|  | Repeat/FM |  | Picture / Format |
|  | Clock/Timer |  | Up |
|  | Clock/Timer Set |  | Down |
|  | Audio In |  | Audio / Lang I/II |
|  | CD |  | 3 |
|  | Band/Tuner |  | Shift + TV/Radio / Program |
|  | Function |  | D.Menu / Top |
|  | I<</- |  | I<< / Preset- |
|  | >> /+ |  | >> / Preset+ |
|  | <</< |  | << / Tune- |
|  | >>/> |  | >> / Tune+ |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------|---|-----------------------|
|  | Play |  | Play / Slow |
|  | Pause |  | Pause / Step / Freeze |
|  | Stop |  | Stop / Hold |
|  | Clear |  | Exit / Cancel / Clear |
|  | EQ |  | Subtitle / EQ |
|  | Vol+ |  | Vol+ |
|  | Vol- |  | Vol- |
|  | Enter |  | OK |
|  | Disk Skip |  | Fav / Marker / PC |
|  | Folder+ |  | CH+ / Page+ |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

