
 
 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Text / Goto
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Clear		Exit / Cancel / Clear
	Enter		Fav / Marker / PC
	Time/Text		Setup / OPT /
	Picture Mode		Sleep / Timer
	Audio		Audio / Lang I/II

Originalfernbedienung Ersatzfernbedienung








 
 


	Subtitle		Subtitle / EQ
	Angle		Red / Netflix / Search
	Sur		Eject / Surround
	Search Mode		AV / Input / RDS
	Repeat		Shift + Setup / OPT / Tools
	A-B		Shift + Play /
	Shuffle		Yellow / YouTube / Repeat
	SA-CD		Smart / List
	Album+		CH+ / Page+
	Album-		CH- / Page-
	Zoom		Shift + Text /
	Picture Navi		Zoom / Size
	>>		>> / Preset+
	<<		<< / Tune-
	>> / >		<< / Preset-
	<< / <		>> / Tune+
	← / <		Shift + << /

Tune-





Originalfernbedienung **Ersatzfernbedienung**

	> / →		Shift + >> / Preset+
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		OK
	Display		Info / Angle
	Menu		Menu / Home
	Top Menu		Shift + Menu /
	Return		Back / Return
	Stop		Stop / Hold
	SA-CD/CD		Display / Media

Originalfernbedienung **Ersatzfernbedienung**





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Power		Power				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	Enter		OK				
	Input		AV / Input / RDS				
	Vol+		Vol+				
	Vol-		Vol-				

