





































Originalfernbedienung Ersatzfernbedienung

	Power		Power
	DTV/ATV		Setup / OPT /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Still		Shift + Pause / Step /
	0		0
	Recall		Back / Return
	Menu		Menu / Home
	Up		Up
	Source		AV / Input / RDS

Originalfernbedienung Ersatzfernbedienung

	Left		Left
	Enter		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	i		Info / Angle
	P+		CH+ / Page+
	Mute		Mute / Dimmer
	Vol+		Vol+
	P-		CH- / Page-
	Sleep		Sleep / Timer
	Vol-		Vol-
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Aspect		Shift + Picture / Format
	Audio		Audio / Lang I/II
	Red		Red / Netflix / Search





**Originalfernbedienung    Ersatzfernbedienung**

	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Text / <<		<< / Tune-
	Text / <<		Text / Goto
	Hold / >>		>> / Tune+
	Mix / I<<		I<< / Preset-
	Subpage / >>I		>>I / Preset+
	Index / Play/Pause		Play / Slow
	Index / Play/Pause		Pause / Step / Freeze
	Size / Stop		Zoom / Size
	Size / Stop		Stop / Hold
	Reveal		D.Menu / Top
	Subtitle		Subtitle / EQ
	DTV/Radio /		TV/Radio /
	DTV/Radio /		Shift + Green / APP /
	List		Smart / List

**Originalfernbedienung    Ersatzfernbedienung**

	Fav		Fav / Marker / PC
	EPG		Guide / EPG / -/-
	Rec		Rec / Rec Mode
	Rec Menu		Shift + Rec / Rec Mode
	T.Shift		Display / Media
			Eject / Surround

