














 
 
 







**Originalfernbedienung Ersatzfernbedienung**

|          |          |   |        |
|----------|----------|---|--------|
| STANDBY  | Standby  |    | Power  |
| P/N      | PN       |    | List   |
| MUTE     | Mute     |    | Mute   |
| EJECT    | Eject    |    | Eject  |
| PROG     | Prog     |    | Sleep  |
| SEARCH   | Search   |    | TV/R   |
| SUBTITLE | Subtitle |    | Subt   |
| ANGLE    | Angle    |    | Format |
| 1        | 1        |    | 1      |
| 2        | 2        |   | 2      |
| 3        | 3        |  | 3      |
| 4        | 4        |  | 4      |
| 5        | 5        |  | 5      |
| 6        | 6        |  | 6      |
| 7        | 7        |  | 7      |
| 8        | 8        |  | 8      |
| 9        | 9        |  | 9      |

**Originalfernbedienung Ersatzfernbedienung**

|   |              |   |               |
|---|--------------|---|---------------|
| 0   | 0            |    | 0             |
| 10+   | 10+          |    | Guide         |
| PBC   | PBC          |    | Pre Ch        |
|   | DVD/USB/CARD |    | Media         |
| SETUP   | Setup        |    | Options       |
| RETURN  | Return       |    | Back          |
|    | Up           |    | Up            |
|    | Left         |    | Left          |
| ENTER   | Enter        |    | Ok            |
|   | Right        |   | Right         |
|  | Down         |  | Down          |
| TITLE   | Title        |  | Smart         |
| MENU  | Menu         |  | Menu          |
| CHANNEL   | Channel      |  | 3D            |
| LANGUAGE  | Language     |  | Dual          |
| ZOOM  | Zoom         |  | Shift + Eject |
| REPEAT  | Repeat       |  | Text          |





Originalfernbedienung Ersatzfernbedienung

|         |         |   |               |
|---------|---------|---|---------------|
| SLOW    | >/Slow  | + | Shift + Play  |
| A-B     | ↔/A-B   | + | Shift + Text  |
| MARK    | Mark    |   | Red           |
| CLEAR   | Clear   |   | Exit          |
| RESET   | Reset   |   | Green         |
| V-MODE  | V-Mode  |   | Yellow        |
| DISPLAY | Display |   | Info          |
| SHUFFLE | Shuffle |   | D. Menu       |
|         | Vol-    |   | Vol -         |
|         | Vol+    |   | Vol +         |
| STOP    | Stop    |   | Stop          |
| STEP    | Step    | + | Shift + Pause |
|         | Play    |   | Play          |
|         | Pause   |   | Pause         |
| F.REV   | <<      |   | <<            |
| F.FWD   | >>      |   | >>            |
| PREV    | <<      |   | <<            |

Originalfernbedienung Ersatzfernbedienung

|  |    |  |    |
|--|----|--|----|
|  | >> |  | >> |
|--|----|--|----|

