





















 

 



 









Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	List		Shift + Smart / List
	Recall		Back / Return
	FAV		Fav / Marker / PC
	Subtitle		Subtitle / EQ
	Info		Info / Angle
	TTX		Text / Goto

Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol+
	Vol-		Vol-
	Page+		Shift + CH+ /
	Page-		Shift + CH- /
	CH+		CH+ / Page+
	CH-		CH- / Page-
	Lang		Audio / Lang I/II
	Timeshift		Smart / List
	Tv/Radio		TV/Radio /
	EPG		Guide / EPG / -/-
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	OK		OK
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear





**Originalfernbedienung Ersatzfernbedienung**

	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>		>>  / Preset+
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	>>		>> / Tune+
	<<		<< / Preset-
	Stop		Stop / Hold
	Timer		Sleep / Timer
	PVR		AV / Input / RDS
	V-Format		Shift + 4
	Aspect		Picture / Format

**Originalfernbedienung Ersatzfernbedienung**