





 
 
 





 
 







 
 


 


 

 




 
 
 









 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Text		Text
	Zoom		Eject
	Subt		Subt
	Audio		Dual
	Rec		Rec
	--		Shift + Guide
	Stop		Stop
	Play / Pause		Play
	Play / Pause		Pause
	<<		<<
	>>		>>

Originalfernbedienung Ersatzfernbedienung

	I<<		I<<
	>>I		>>I
	Menu		Menu
	FAV		Pre Ch
	Up / PR+		Up
	Down / PR-		Down
	Right / Vol+		Right
	Left / Vol-		Left
	OK / List		Ok
	OK / List		List
	Exit		Exit
	EPG		Guide
	Vol+		Vol +
	Vol-		Vol -
	Info		Info
	Media		Media
	Page+		Ch +





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Page-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Back
	TV / Radio		TV/R

