





 

 

 



































**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Sleep		Sleep / Timer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Mute		Mute / Dimmer
	0		0
	Recall		Back / Return
	Subtl		Subtitle / EQ
	V.O.		Sound / Title
	←		Eject / Surround

**Originalfernbedienung    Ersatzfernbedienung**

	Vol+		Vol+
	Home		Shift + Menu /
	P+		CH+ / Page+
	Vol-		Vol-
	Movie		Display / Media
	P-		CH- / Page-
	Mouse		Smart / List
	♪		D.Menu / Top
	16:9		Picture / Format
	Menu		Menu / Home
	Up		Up
	Source		AV / Input / RDS
	Left		Left
	OK		OK
	Right		Right
	Info		Info / Angle
	Down		Down





**Originalfernbedienung**   **Ersatzfernbedienung**

	Exit		Exit / Cancel / Clear
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	<</[≡i]		<< / Tune-
	Play		Play / Slow
	Pause/[≡◆]		Pause / Step / Freeze
	>>/[≡?]		>> / Tune+
	<</[≡o]		<< / Preset-
	Stop/[≡+]		Stop / Hold
	>> /[≡x]		>>  / Preset+
	Rec		Rec / Rec Mode
	[ /≡]		Zoom / Size
	FAV		Fav / Marker / PC
	EPG		Guide / EPG / -/--
	Tv/Radio		TV/Radio /

**Originalfernbedienung**   **Ersatzfernbedienung**

	USB		Shift + 8

