













 









 




Originalfernbedienung Ersatzfernbedienung

	Guia		Guide / EPG / -/--
	Power		Power
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	←		Back / Return
	O		Fav / Marker / PC
	agiletv		Green / APP / Repeat
	V+		Vol+
	Voice		Smart / List
	P+		CH+ / Page+
	V-		Vol-
	P-		CH- / Page-
	Netflix		Red / Netflix / Search
	Sky		Display / Media

Originalfernbedienung Ersatzfernbedienung

	prime video		Blue / Prime Video / Random
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Mute		Mute / Dimmer
	0		0
	Rec		Rec / Rec Mode

