




 


 





























 

 











 










 





 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep / Timer
	Tuner/Band	 + 	Shift + 6
	Auto/Mono		Audio / Lang I/II
	1		1
	2		2
	3		3
	Disc		D.Menu / Top
	4		4
	5		5
	6		6
	>10		Guide / EPG / -/--
	7		7
	8		8
	9		9
	0		0
	Display Mode		Display / Media

Originalfernbedienung Ersatzfernbedienung

	PTY Select		Setup / OPT /
	Search		Red / Netflix / Search
	CD	 + 	Shift + 3
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Program		TV/Radio /
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Cancel		Exit / Cancel / Clear
	Tape	 + 	Shift + 5
	<< Tape		<< / Tune-
	>> Tape		>> / Tune+
	Rec/Pause		Rec / Rec Mode
	< Tape	 + 	Shift + << /
	Stop Tape	 + 	Shift + Stop /
	Tape >	 + 	Shift + >> / Tune+

Tune+




Originalfernbedienung Ersatzfernbedienung

	Muting		Mute / Dimmer
	Vol-		Vol-
	Vol+		Vol+

Originalfernbedienung Ersatzfernbedienung

