


 


 






 
 


 





 




Originalfernbedienung Ersatzfernbedienung

|   |                  |   |        |
|---|------------------|---|--------|
|    | Power            |    | Power  |
|    | Vol+             |    | Vol +  |
|    | Vol-             |    | Vol -  |
|    | PR+              |    | Ch +   |
|    | PR-              |    | Ch -   |
|    | Mute             |    | Mute   |
|    | Menu             |    | Menu   |
|    | Exit             |    | Exit   |
|    | Back             |    | Back   |
|    | OK               |    | Ok     |
|    | Up               |    | Up     |
|    | Down             |    | Down   |
|   | Right/Zoom+      |   | Right  |
|  | Left/Zoom-       |  | Left   |
|  | Red/[o]          |  | Red    |
|  | Green/Timer/List |  | Green  |
|  | Yellow           |  | Yellow |

Originalfernbedienung Ersatzfernbedienung

|   |          |   |       |
|---|----------|---|-------|
|    | Blue/[ ] |    | Blue  |
|    | Info     |    | Info  |
|    | Text     |    | Text  |
|    | 1        |    | 1     |
|    | 2        |    | 2     |
|    | 3        |    | 3     |
|    | 4        |    | 4     |
|    | 5        |    | 5     |
|    | 6        |    | 6     |
|    | 7        |    | 7     |
|    | 8        |    | 8     |
|    | 9        |    | 9     |
|   | 0/-/--   |   | 0     |
|  | AV       |  | AV    |
|  | SP/LP    |  | Media |
|  | Play     |  | Play  |
|  | >>       |  | >>    |





Originalfernbedienung Ersatzfernbedienung

| Originalfernbedienung |       | Ersatzfernbedienung |       |
|-----------------------|-------|---------------------|-------|
|                       | <<    |                     | <<    |
|                       | Stop  |                     | Stop  |
|                       | Pause |                     | Pause |
|                       | Rec   |                     | Rec   |
|                       | Mark  |                     | 3D    |
|                       | 0000  |                     | Guide |
|                       |       |                     |       |
|                       |       |                     |       |
|                       |       |                     |       |
|                       |       |                     |       |
|                       |       |                     |       |
|                       |       |                     |       |
|                       |       |                     |       |
|                       |       |                     |       |
|                       |       |                     |       |
|                       |       |                     |       |
|                       |       |                     |       |
|                       |       |                     |       |
|                       |       |                     |       |
|                       |       |                     |       |
|                       |       |                     |       |
|                       |       |                     |       |
|                       |       |                     |       |
|                       |       |                     |       |
|                       |       |                     |       |
|                       |       |                     |       |
|                       |       |                     |       |

 



 

 



 



 
 

 
 
 
 







 


 


Originalfernbedienung Ersatzfernbedienung

| Originalfernbedienung |  | Ersatzfernbedienung |  |
|-----------------------|--|---------------------|--|
|                       |  |                     |  |
|                       |  |                     |  |
|                       |  |                     |  |
|                       |  |                     |  |
|                       |  |                     |  |
|                       |  |                     |  |
|                       |  |                     |  |
|                       |  |                     |  |
|                       |  |                     |  |
|                       |  |                     |  |
|                       |  |                     |  |
|                       |  |                     |  |
|                       |  |                     |  |
|                       |  |                     |  |
|                       |  |                     |  |
|                       |  |                     |  |
|                       |  |                     |  |
|                       |  |                     |  |
|                       |  |                     |  |
|                       |  |                     |  |
|                       |  |                     |  |
|                       |  |                     |  |
|                       |  |                     |  |
|                       |  |                     |  |
|                       |  |                     |  |
|                       |  |                     |  |
|                       |  |                     |  |
|                       |  |                     |  |
|                       |  |                     |  |
|                       |  |                     |  |
|                       |  |                     |  |
|                       |  |                     |  |





Originalfernbedienung Ersatzfernbedienung

|   |                  |   |        |
|---|------------------|---|--------|
|    | Power            |    | Power  |
|    | Vol+             |    | Vol +  |
|    | Vol-             |    | Vol -  |
|    | Mute             |    | Mute   |
|    | PR+              |    | Ch +   |
|    | PR-              |    | Ch -   |
|    | Exit             |    | Exit   |
|    | Menu             |    | Menu   |
|    | Back             |    | Back   |
|    | Up               |    | Up     |
|    | Down             |    | Down   |
|   | Right/Zoom+      |   | Right  |
|  | Left/Zoom-       |  | Left   |
|  | OK               |  | Ok     |
|  | Red/[o]          |  | Red    |
|  | Green/Timer/List |  | Green  |
|  | Yellow           |  | Yellow |

Originalfernbedienung Ersatzfernbedienung

|   |          |   |       |
|---|----------|---|-------|
|    | Blue/[ ] |    | Blue  |
|    | Info     |    | Info  |
|    | Text     |    | Text  |
|    | Play     |    | Play  |
|    | Stop     |    | Stop  |
|    | Rec      |    | Rec   |
|    | Pause    |    | Pause |
|    | >>       |    | >>    |
|    | <<       |    | <<    |
|    | 1        |    | 1     |
|    | 2        |    | 2     |
|   | 3        |   | 3     |
|  | 4        |  | 4     |
|  | 5        |  | 5     |
|  | 6        |  | 6     |
|  | 7        |  | 7     |
|  | 8        |  | 8     |





**Originalfernbedienung Ersatzfernbedienung**

|  |       |  |       |
|--|-------|--|-------|
|  | 9     |  | 9     |
|  | AV    |  | AV    |
|  | SP/LP |  | Media |
|  |       |  |       |
|  |       |  |       |
|  |       |  |       |
|  |       |  |       |
|  |       |  |       |
|  |       |  |       |
|  |       |  |       |
|  |       |  |       |
|  |       |  |       |
|  |       |  |       |
|  |       |  |       |
|  |       |  |       |
|  |       |  |       |
|  |       |  |       |

 



 

 


 



 

 

 
 







 


 


**Originalfernbedienung Ersatzfernbedienung**

|  |  |  |  |
|--|--|--|--|
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |



 
 
 
 
 

 

 
 
 
 
 

 

 

 

 

 
 
 
 
 

 
 
 
 




**Originalfernbedienung    Ersatzfernbedienung**

|   |                  |   |        |
|---|------------------|---|--------|
|    | Power            |    | Power  |
|    | Vol+             |    | Vol +  |
|    | Vol-             |    | Vol -  |
|    | Mute             |    | Mute   |
|    | PR+              |    | Ch +   |
|    | PR-              |    | Ch -   |
|    | Menu             |    | Menu   |
|    | Exit             |    | Exit   |
|    | Back             |    | Back   |
|    | Up               |    | Up     |
|    | Down             |    | Down   |
|   | Right/Zoom+      |   | Right  |
|  | Left/Zoom-       |  | Left   |
|  | OK               |  | Ok     |
|  | Red/[o]          |  | Red    |
|  | Green/Timer/List |  | Green  |
|  | Yellow           |  | Yellow |

**Originalfernbedienung    Ersatzfernbedienung**

|   |          |   |       |
|---|----------|---|-------|
|    | Blue/[ ] |    | Blue  |
|    | Info     |    | Info  |
|    | Text     |    | Text  |
|    | 1        |    | 1     |
|    | 2        |    | 2     |
|    | 3        |    | 3     |
|    | 4        |    | 4     |
|    | 5        |    | 5     |
|    | 6        |    | 6     |
|    | 7        |    | 7     |
|    | 8        |    | 8     |
|   | 9        |   | 9     |
|  | 0/-/--   |  | 0     |
|  | AV       |  | AV    |
|  | SP/LP    |  | Media |
|  | Play     |  | Play  |
|  | Stop     |  | Stop  |





**Originalfernbedienung   Ersatzfernbedienung   Originalfernbedienung   Ersatzfernbedienung**

|  |       |  |       |
|--|-------|--|-------|
|  | >>    |  | >>    |
|  | <<    |  | <<    |
|  | Rec   |  | Rec   |
|  | Pause |  | Pause |
|  | Mark  |  | 3D    |
|  | 0000  |  | Guide |
|  |       |  |       |
|  |       |  |       |
|  |       |  |       |
|  |       |  |       |
|  |       |  |       |
|  |       |  |       |
|  |       |  |       |
|  |       |  |       |
|  |       |  |       |
|  |       |  |       |
|  |       |  |       |
|  |       |  |       |
|  |       |  |       |
|  |       |  |       |
|  |       |  |       |
|  |       |  |       |
|  |       |  |       |
|  |       |  |       |
|  |       |  |       |
|  |       |  |       |

