


 
 

 

 
 
 


 

 
 
 

 

 

 






 
 

 

 




 

 



 





 
 
 


Originalfernbedienung Ersatzfernbedienung

PWR On/Off		Power
Mute		Mute
Epg	 + 	Shift + Guide
Subt.List		Subt
Opt?		Options
App		Media
Info	 + 	Shift + Info
Sleep Timer		Sleep
TV		TV/R
Video		D. Menu
Text		Text
Zoom		Eject
TV/SAT		AV
Menu		Menu
Menu Up		Up
Display		Info
Menu Left		Left

Originalfernbedienung Ersatzfernbedienung


 











 

 


OK Enter		Ok
Menu Right		Right
Exit		Exit
Menu Down		Down
Back		Back
Volume+		Vol +
CH/Page+		Ch +
Audio		Dual
Volume-		Vol -
CH/Page-		Ch -
1. ?		1
2abc		2
3def		3
4ghi		4
5jkl		5
6mno		6
7pqrm		7




 
 
 
 






 
 




Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung	
8tuv		8	8	
9wxyz		9	9	
Guide Pilote		Guide	Guide	
0/10		0	0	
FAV Pref.		Pre Ch	Pre Ch	
Red		Red	Red	
Green		Green	Green	
West		I<<	I<<	
Dev		3D	3D	
Yellow		Yellow	Yellow	
Freeze		Stop	Stop	
Blue		Blue	Blue	
On/Off	 + 	Shift + Power	Shift + Power	
SAT Sky		Smart	Smart	
Home Cinema		List	List	
East		>>I	>>I	
Lang./Rewind		<<	<<	
		H/V Play		Play
		LNB F.Forward		>>



Originalfernbedienung Ersatzfernbedienung

 



 




 
 







PWR On/Off		Power
Mute		Mute
Epg	 + 	Shift + Guide
Sleep Timer		Sleep
Opt?		Options
App		Media
Info	 + 	Shift + Info
TV		TV/R
Video		D. Menu
Text		Text
Zoom		Eject
TV/SAT		AV
Menu		Menu
Menu Up		Up
Display		Info
Menu Left		Left
OK Enter		Ok

Originalfernbedienung Ersatzfernbedienung




 
Menu Right		Right
Exit		Exit
Menu Down		Down
Back		Back
Audio		Dual
Volume+		Vol +
CH/Page+		Ch +
Volume-		Vol -
CH/Page-		Ch -
1. ?		1
2abc		2
3def		3
4ghi		4
5jkl		5
6mno		6
7pqrm		7
8tuv		8



Originalfernbedienung Ersatzfernbedienung

9wxyz		9
Guide Pilote		Guide
0/10		0
FAV Pref.		Pre Ch
Freeze		Stop
Scan/Setup	 + 	Shift + Options
Red		Red
Auth./DISEQC		List
Green		Green
Radio	 + 	Shift + TV/R
Yellow		Yellow
Blue		Blue
Home Cinema		Smart
Alt/16:9		Format
SAT Sky	 + 	Shift + AV
Dec/Pause		Pause
	 + 	Shift + Exit

Originalfernbedienung Ersatzfernbedienung

East		>>
Lang./Rewind		<<
H/V Play		Play
LNB F.Forward		>>

