




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Info		Info
	VCR		AV
	TV / Radio		TV/R
	RF		Smart
	Scan		Media
	FAV		Pre Ch
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

Originalfernbedienung Ersatzfernbedienung

	RCL		Back
	EPG		Guide
	Mute		Mute
	Red / Audio		Red
	Red / Audio		Dual
	Green		Green
	Yellow / Subtitle		Yellow
	Yellow / Subtitle		Subt
	Blue / Sound L/R		Blue
	Exit		Exit
	Menu		Menu
	Up / PR+		Ch +
	Up / PR+		Up
	Down / PR-		Ch -
	Down / PR-		Down
	Right / Vol+		Right
	Right / Vol+		Vol +





Originalfernbedienung   Ersatzfernbedienung

	Left / Vol-		Left
	Left / Vol-		Vol -
	OK		Ok
	~VCR / Page-		I<<
	TV/VCR / Page+		>>I
	TV/VCR / Page+		Shift + TV/R

Originalfernbedienung   Ersatzfernbedienung