 



 

 

 

 

 

 

 

 

 

 

 



 



 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	TV/R		TV/Radio /
	Source		AV / Input / RDS
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Exit		Exit / Cancel / Clear
	0		0
	-/--		Shift + Guide / EPG / -/--
	Menu		Menu / Home

Originalfernbedienung Ersatzfernbedienung

	P+		CH+ / Page+
	Up		Up
	Vol+		Vol+
	P-		CH- / Page-
	Left		Left
	OK		OK
	Right		Right
	Vol-		Vol-
	Down		Down
	i		Info / Angle
	Audio		Audio / Lang I/II
	Sub		Subtitle / EQ
	Guide		Guide / EPG / -/--
	TXT		Text / Goto
	↔		Fav / Marker / PC
	Pause		Pause / Step / Freeze
	F1		Shift + 1





Originalfernbedienung Ersatzfernbedienung

F2	F2	SHIFT + 2	Shift + 2
F3	F3	SHIFT + 3	Shift + 3
Red	Red	NETFLIX SEARCH	Red / Netflix / Search
Green	Green	APP REPEAT	Green / APP / Repeat
Yellow	Yellow	YouTube REPEAT A-B	Yellow / YouTube / Repeat
Blue	Blue	Prime Video RANDOM	Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung

 

 




 

 

 



 

 
 

 

 

 

 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Tv/R		TV/Radio /
	Input		AV / Input / RDS
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Exit		Exit / Cancel / Clear
	0		0
	-/--		Shift + Guide / EPG / -/--
	Menu		Menu / Home

Originalfernbedienung Ersatzfernbedienung

	P+		CH+ / Page+
	Up		Up
	Vol+		Vol+
	P-		CH- / Page-
	Left		Left
	OK		OK
	Right		Right
	Vol-		Vol-
	Down		Down
	i		Info / Angle
	Audio		Audio / Lang I/II
	Sub		Subtitle / EQ
	Guide		Guide / EPG / -/--
	TXT		Text / Goto
	↔		Fav / Marker / PC
	Pause		Pause / Step / Freeze
	F1		Shift + 1





Originalfernbedienung **Ersatzfernbedienung**

	F2	+ 2	Shift + 2
	F3	+ 3	Shift + 3
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

Originalfernbedienung **Ersatzfernbedienung**

