

 
 
 





 
 
 

 
 
 
 
 

 





 












 
 
 
 



 

 

 

 

 

 
 
 
 


 







**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Red / F1		Red
	Green / F2		Green
	Yellow / F3		Yellow
	Blue / F4		Blue
	A - B		AV
	EPG		Guide
	Text		Text
	Exit		Exit
	Menu		Menu
	Info		Info
	Mute		Mute
	Up / CH +		Up
	Up / CH +		Ch +
	Down / CH -		Down
	Down / CH -		Ch -
	Right / V +		Right

**Originalfernbedienung    Ersatzfernbedienung**

	Right / V +		Vol +
	Left / V-		Left
	Left / V-		Vol -
	OK		Ok
	TV / Radio		TV/R
	Subtitle		Subt
	Recall		Back
	FAV		Pre Ch
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	0		0				

