 




 





Originalfernbedienung Ersatzfernbedienung

 
	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TV / Radio		TV/R
	←PR		Back
	↑		>>I
	↓		I<<
	Pause		Pause

Originalfernbedienung Ersatzfernbedienung

	TV / AV		AV
	Red / Audio		Red
	Red / Audio		Dual
	Green / Text		Green
	Green / Text		Text
	Yellow / [_]		Yellow
	Yellow / [_]		Subt
	Blue / Timer		Blue
	Blue / Timer		Shift + AV
	EPG		Guide
	Menu		Menu
	Info		Info
	Exit		Exit
	Up / PR+		Up
	Up / PR+		Ch +
	Down / PR-		Down
	Down / PR-		Ch -





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 Right / Vol+	 Right		
 Right / Vol+	 Vol +		
 Left / Vol-	 Left		
 Left / Vol-	 Vol -		
 OK / List	 Ok		
 OK / List	 List		
 FAV	 Pre Ch		
 Sleep	 Sleep		
 Smart	 Smart		
 PAL / NTSC	 Format		

