 

 













 










 



 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Shift + Guide / EPG / -/--
	Recall		Back / Return
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Auto		Eject / Surround

Originalfernbedienung Ersatzfernbedienung

	Menu		Menu / Home
	Source		AV / Input / RDS
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	Display		Display / Media
	FAV		Fav / Marker / PC
	Vol+		Vol+
	FAV+		Shift + Yellow / YouTube /
	CH+		CH+ / Page+
	Vol-		Vol-
	Repeat/FAV-		Shift + Green / APP /
	CH-		CH- / Page-
	Text		Text / Goto



