




 






 

 




 





 






















 













 

 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	TV/SAT		AV / Input / RDS
	TV/Radio		TV/Radio /
	Zoom		Zoom / Size
	List		Smart / List
	Audio		Audio / Lang I/II
	EPG		Guide / EPG / -/--
	Timer		Sleep / Timer
	Text		Text / Goto
	Exit		Exit / Cancel / Clear
	Menu		Menu / Home
	M/P		Display / Media
	Mute		Mute / Dimmer

Originalfernbedienung Ersatzfernbedienung

	CH+		CH+ / Page+
	CH-		CH- / Page-
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		OK
	Vol+		Vol+
	Vol-		Vol-
	Recall		Back / Return
	P+		>> / Preset+
	P-		<< / Preset-
	FAV		Fav / Marker / PC
	1		1
	2		2
	3		3
	4		4





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
5	5	TAPE 5	5				
6	6	TUNER 6	6				
7	7	AUX - HDD 7	7				
8	8	USB 8	8				
9	9	BLUETOOTH 9	9				
0	0	HDMI - BAT 0	0				
INFO	Info	ANGLE INFO	Info / Angle				
PAUSE	Pause	STEP - FREEZE 	Pause / Step / Freeze				




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	SAT		Smart / List
	Info		Info / Angle
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0 / Zoom		Zoom / Size
	0 / Zoom		0
	Audio		Audio / Lang I/II
	Mute		Mute / Dimmer
	Recall		Back / Return


Originalfernbedienung Ersatzfernbedienung

	FAV		Fav / Marker / PC
	Up / CH+		CH+ / Page+
	Down / CH-		Down
	Up / CH+		Up
	Right / Vol+		Right
	Right / Vol+		Vol+
	Down / CH-		CH- / Page-
	Left / Vol-		Vol-
	Left / Vol-		Left
	OK		OK
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	Blue / Pause		Blue / Prime Video / Random
	Blue / Pause		Pause / Step / Freeze
	Red / Text		Red / Netflix / Search
	Red / Text		Text / Goto
	Multivideo		Display / Media





Originalfernbedienung Ersatzfernbedienung



 











 


	Yellow / Subtitle		Yellow / YouTube / Repeat
	Yellow / Subtitle		Subtitle / EQ
	TV / AV		AV / Input / RDS
	Green / P/N		Green / APP / Repeat
	TV / Radio		TV/Radio /
	SAT		Shift + 0
	EPG		Guide / EPG / -/--

Originalfernbedienung Ersatzfernbedienung


















 




Originalfernbedienung Ersatzfernbedienung

Mute		Mute / Dimmer
PWR On/Off		Power
App	 + 	Shift + Green / APP /
Epg		Guide / EPG / -/--
Info		Info / Angle
Subt.List		Subtitle / EQ
TV		TV/Radio /
Text		Text / Goto
Zoom		Zoom / Size
Menu		Menu / Home
TV/SAT		AV / Input / RDS
Menu Up		Up
Display		Display / Media
Menu Left		Left
OK Enter		OK
Menu Right		Right
Exit		Exit / Cancel / Clear

Originalfernbedienung Ersatzfernbedienung

Menu Down		Down
Back		Back / Return
Volume+		Vol+
CH/Page+		CH+ / Page+
Volume-		Vol-
CH/Page-		CH- / Page-
Audio		Audio / Lang I/II
1. ?		1
2abc		2
3def		3
4ghi		4
5jkl		5
6mno		6
7pqrm		7
8tuv		8
9wxyz		9
Guide Pilote	 + 	Shift + Guide / EPG / -/--













Originalfernbedienung Ersatzfernbedienung

0/10	HDMI - SAT 0	0
FAV Pref.	PC FAV MARKER	Fav / Marker / PC
Red	NETFLIX SEARCH	Red / Netflix / Search
Green	APP REPEAT	Green / APP / Repeat
Yellow	YouTube REPEAT A-B	Yellow / YouTube / Repeat
Blue	Prime Video RANDOM	Blue / Prime Video / Random
Dec/Pause	STEP - FREEZE 	Pause / Step / Freeze
	LIST SMART	Smart / List
	TOP MENU D.MENU	D.Menu / Top


















Originalfernbedienung Ersatzfernbedienung




Originalfernbedienung Ersatzfernbedienung

Power		Power
Mute		Mute / Dimmer
Pause		Pause / Step / Freeze
Audio		Audio / Lang I/II
Zoom		Zoom / Size
Timer		Sleep / Timer
Tv/Radio		TV/Radio /
Text		Text / Goto
Tv/SAT		AV / Input / RDS
Menu		Menu / Home
Up/CH+		Up
Info		Info / Angle
Left		Left
OK		OK
Right		Right
Exit		Exit / Cancel / Clear
Down/CH-		Down







Originalfernbedienung Ersatzfernbedienung

Recall		Back / Return
Vol+		Vol+
List		Smart / List
P+		CH+ / Page+
Vol-		Vol-
M/P		Display / Media
P-		CH- / Page-
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
EPG		Guide / EPG / -/-





Originalfernbedienung Ersatzfernbedienung

0/Sleeptimer		0
FAV		Fav / Marker / PC
Red		Red / Netflix / Search
Green		Green / APP / Repeat
Yellow		Yellow / YouTube / Repeat
Blue		Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung

