 








 














 
 


 
 
 
 

 



 






 
 




 
 
 
 


 

 
 



 
 

 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Back		Back
	APP		Media
	Menu		Menu
	Exit		Exit
	EPG		Guide

Originalfernbedienung Ersatzfernbedienung

	i		Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Tv/Radio		TV/R
	List		List
	P+		Ch +
	P-		Ch -
	Red/F1		Red
	Green/F2		Green
	Yellow/F3		Yellow
	Blue/F4		Blue
	Audio		Dual





Originalfernbedienung Ersatzfernbedienung

	[...]		Subt
	Tv/AV		AV
	Pause		Pause
	OPT		Options
	Text		Text
	L+		>>
	L-		<<

Originalfernbedienung Ersatzfernbedienung

