





 





 



 












 

 

 

 

 



 



 





 

 






 


 
 


 




Originalfernbedienung    Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Back		Back
	APP		Media
	Menu		Menu
	Exit		Exit
	EPG		Guide

Originalfernbedienung    Ersatzfernbedienung

	i		Info
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	V +		Vol +
	V -		Vol -
	TV / Radio		TV/R
	List		List
	P +		Ch +
	P -		Ch -
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Audio		Dual





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Subtitles		Subt
	Text		Text
	Pause		Pause
	OPT		Options
	TV/AV		AV
	L -		<<
	L +		>>

