








 


 


 

 
 



 

 



 




 







 





 



 



 

 

 

 



 






Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Power		Power		Guide		Guide
	Mute		Mute		TV / Radio		TV/R
	UHF		Options		Menu		Menu
	Antena		Smart		Audio		Dual
	Sleep		Sleep		Up / P+		Up
	1		1		Up / P+		Ch +
	2		2		Down / P-		Down
	3		3		Down / P-		Ch -
	4		4		Right / V+		Right
	5		5		Right / V+		Vol +
	6		6		Left / V-		Left
	7		7		Left / V-		Vol -
	8		8		OK / List		Ok
	9		9		FAV		Pre Ch
	0		0		Subtitle		Subt
	Recall		Back		Exit		Exit
	i		Info		Text		Text



