



Originalfernbedienung Ersatzfernbedienung

	POWER		Power
	DISPL. / OFF		Shift + Power
	SLEEP		Sleep
	TEXT		Text
	PRESETS		Options
	SUBTITLE		Subt
	AUDIO		Shift + Dual
	LANG.		Dual
	ASPECT		Format
	FREEZE		Shift + Stop
	RED		Red
	GREEN		Green
	YELLOW		Yellow
	BLUE		Blue
	MENU		Menu
	EXIT		Exit
	UP		Up

Originalfernbedienung Ersatzfernbedienung

	LEFT		Left
	OK		Ok
	RIGHT		Right
	DOWN		Down
	GUIDE		Guide
	INFO		Info
	VOL+		Vol +
	VOL-		Vol -
	SOURCE		AV
	FAV		Pre Ch
	MUTE		Mute
	P+		Ch +
	P-		Ch -
	MEDIA		Media
	<<		<<
	>>		>>
	PLAY/PAUSE		Play



