


Originalfernbedienung Ersatzfernbedienung

| | | | |
|-------------------------------------------------------------------------------------|--------------|-------------------------------------------------------------------------------------|---------------|
|  | Standby |  | Power |
|  | Open / Close |  | Eject |
|  | Mute |  | Mute |
|  | OSD |  | Smart |
|  | Step |  | Shift + Pause |
|  | Recover |  | Media |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | +10 |  | Guide |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---------------------------------------------------------------------------------------|----------|---------------------------------------------------------------------------------------|---------|
|  | Clear |  | Exit |
|  | Setup |  | Options |
|  | Search |  | TV/R |
|  | Up |  | Up |
|  | Right |  | Right |
|  | Down |  | Down |
|  | Left |  | Left |
|  | Enter |  | Ok |
|  | Subtitle |  | Subt |
|  | Audio |  | Dual |
|  | Play |  | Play |
|  | Pause |  | Pause |
|  | Stop |  | Stop |
|  | I<< |  | I<< |
|  | >>I |  | >>I |
|  | << |  | << |
|  | >> |  | >> |



