 







 









 



















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Info		Info / Angle
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Source		AV / Input / RDS
	0		0
	Audio I/II		Audio / Lang I/II
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear









 











 



 







 

Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	CH +		CH+ / Page+
	Index		Display / Media
	Vol +		Vol+
	CH -		CH- / Page-
	List		Smart / List
	Vol -		Vol-
	Fav		Fav / Marker / PC
	Sleep		Sleep / Timer
	EPG		Guide / EPG / -/-
	Recall		Back / Return
	Red / <<		<< / Tune-
	Red / <<		Red / Netflix / Search





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Info		Info / Angle
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Source		AV / Input / RDS
	0		0
	O)/I-II/Audio		Audio / Lang I/II
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear

Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	CH+		CH+ / Page+
	Index		Display / Media
	Vol+		Vol+
	CH-		CH- / Page-
	List		Smart / List
	Vol-		Vol-
	♥		Fav / Marker / PC
	Sleep		Sleep / Timer
	EPG		Guide / EPG / -/-
	Recall		Back / Return
	Red		Red / Netflix / Search
	<<		<< / Tune-



