



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Audio		Dual
	Recall		Back
	TV Menu		Menu
	Source		AV
	Up		Up

Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	Ch. List		Smart
	Exit		Exit
	Vol +		Vol +
	Vol -		Vol -
	Sound		Shift + Dual
	Ch +		Ch +
	Ch -		Ch -
	PIC		Shift + Format
	Text		Text
	Aspect		Format
	Freeze		Pause
	EPG		Guide
	Sleep		Sleep





Originalfernbedienung Ersatzfernbedienung

TV/RADIO	TV / RADIO	SEARCH TV/R	TV/R
INFO	Info	DISPLAY INFO	Info
FAV	FAV	FAV PRE-CH	Pre Ch
Red	Red	A	Red
Green	Green	B	Green
Yellow	Yellow	C	Yellow
Blue	Blue	D	Blue
REVEAL	Reveal	APP MEDIA	Media
HOLD	Hold	■	Stop
LIST	List	DISC NAV LIST	List
SUB PAGE	Subpage	◀◀	<<
SIZE	Size	ZOOM ▲	Eject
MIX	Mix	▶▶	>>
SUBTITLE	Subtitle	AD SUBT	Subt
INDEX	Index	PLAY MODE ▶	Play

Originalfernbedienung Ersatzfernbedienung

