 

 









 




 
 

 
 









**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Tv/AV		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--		Shift + Guide / EPG / -/--
	0		0
	Back		Back / Return
	Vol+		Vol+
	Scan		Smart / List
	P+		CH+ / Page+

 






 

**Originalfernbedienung    Ersatzfernbedienung**

	Vol-		Vol-
	Zoom		Zoom / Size
	P-		CH- / Page-
	Up		Up
	Left		Left
	OK/Select		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Mute		Mute / Dimmer
	Red / Picture		Red / Netflix / Search
	Red / Picture		Picture / Format
	Green / Sound		Green / APP / Repeat
	Green / Sound		Sound / Title
	Yellow / Sleep		Yellow / YouTube / Repeat
	Yellow / Sleep		Sleep / Timer
	Blue / Call		Blue / Prime Video / Random





**Originalfernbedienung Ersatzfernbedienung**

	Text		Text / Goto
	Mix		Shift + Text /
	Size		Shift + Zoom /
	Index		Rec / Rec Mode
	Hold		Stop / Hold
	Reveal		Play / Slow
	Subpage		Subtitle / EQ
	Cancel		Exit / Cancel / Clear
	DVB Menu		D.Menu / Top
	i		Info / Angle
	EPG		Guide / EPG / -/--
	ESC		Fav / Marker / PC
	DVB		Display / Media
	Freeze		Pause / Step / Freeze
	I/II		Audio / Lang I/II

**Originalfernbedienung Ersatzfernbedienung**