





 

 

 

 



 

 

 

 
 



 












 





 

 




 

 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Shift + Guide
	Recall		Back
	Source		AV
	P.STD		Smart

Originalfernbedienung Ersatzfernbedienung

	S.STD		Media
	Menu/ATV		Menu
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	PR-		Ch -
	PR+		Ch +
	Freeze		Pause
	Info/Display		Info
	Menu/DVB		D. Menu
	[.≡]/TTX		Text
	I/II		Dual
	[≡x]/Exit		Exit





Originalfernbedienung Ersatzfernbedienung

	[≡◆]/EPG		Guide
	[≡+]/FAV		Pre Ch
	[≡i]/TV.R		TV/R
	[≡?]/Subt		Subt
	[≡o]/Aspect		Format
	[≡..]		List
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

Originalfernbedienung Ersatzfernbedienung

