 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Audio		Dual
	Recall		Back
	Tv Menu		Menu
	Source		AV
	CH List		List

Originalfernbedienung Ersatzfernbedienung

	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Sound		Shift + Dual
	PIC		Format
	CH+		Ch +
	CH-		Ch -
	Sleep		Sleep
	Aspect		3D
	Freeze		Options
	USB		Media
	Text		Text





 
 


 

 





Originalfernbedienung Ersatzfernbedienung

	EPG		Guide
	FAV		Pre Ch
	Info		Info
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	DTV		TV/R
	Hold		Eject
	List		Shift + List
	Subpage		Shift + Subt
	Index		Smart
	PVR List		D. Menu
	Mix		Shift + 3D
	Subtitle		Subt
	<<		<<
	>>		>>

Originalfernbedienung Ersatzfernbedienung

	I<<		I<<
	>>I		>>I
	Play		Play
	Pause		Pause
	Stop		Stop
	Rec/Rep		Rec

