



Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------|---|------------------|
|  | Power |  | Power |
|  | Mute |  | Mute / Dimmer |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | DTV/ATV |  | D.Menu / Top |
|  | Recall |  | Back / Return |
|  | P.Mode |  | Picture / Format |
|  | S.Mode |  | Sound / Title |
|  | Sleep |  | Sleep / Timer |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|---|-----------------------|
|  | Menu |  | Menu / Home |
|  | Source |  | AV / Input / RDS |
|  | Up |  | Up |
|  | Left |  | Left |
|  | Enter |  | OK |
|  | Right |  | Right |
|  | Down |  | Down |
|  | Exit |  | Exit / Cancel / Clear |
|  | Display |  | Display / Media |
|  | Vol+ |  | Vol+ |
|  | Vol- |  | Vol- |
|  | MTS |  | Info / Angle |
|  | Rec List |  | Smart / List |
|  | CH+ |  | CH+ / Page+ |
|  | CH- |  | CH- / Page- |
|  | FAV/List |  | Fav / Marker / PC |
|  | Rec |  | Rec / Rec Mode |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|------------------------|--|-------------------------------|
| | Freeze | | Pause / Step / Freeze |
| | Guide | | Guide / EPG / -/- |
| | << | | << / Tune- |
| | >> / Aspect | | >> / Tune+ |
| | >> / Aspect | | Shift + Picture / Format |
| | I<< / Cancel | | I<< / Preset- |
| | I<< / Cancel | | Shift + Exit / Cancel / Clear |
| | >>I / Sub.PG | | >>I / Preset+ |
| | Stop / Index | | Stop / Hold |
| | Play/Pause / Timeshift | | Play / Slow |
| | Tv/Radio | | TV/Radio / |
| | Subtitle | | Subtitle / EQ |
| | Reveal | | Eject / Surround |
| | Size | | Zoom / Size |
| | Hold | | Shift + Stop / |
| | Text | | Text / Goto |
| | Red | | Red / Netflix / Search |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--------|--|-----------------------------|
| | Green | | Green / APP / Repeat |
| | Yellow | | Yellow / YouTube / Repeat |
| | Cyan | | Blue / Prime Video / Random |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------|---|------------------|
|  | Power |  | Power |
|  | Mute |  | Mute / Dimmer |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | DTV/ATV |  | D.Menu / Top |
|  | Recall |  | Back / Return |
|  | P.Mode |  | Picture / Format |
|  | S.Mode |  | Sound / Title |
|  | Sleep |  | Sleep / Timer |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|---|-----------------------|
|  | Menu |  | Menu / Home |
|  | Source |  | AV / Input / RDS |
|  | Up |  | Up |
|  | Left |  | Left |
|  | Enter |  | OK |
|  | Right |  | Right |
|  | Down |  | Down |
|  | Exit |  | Exit / Cancel / Clear |
|  | Display |  | Display / Media |
|  | Vol+ |  | Vol+ |
|  | Vol- |  | Vol- |
|  | MTS |  | Info / Angle |
|  | Rec List |  | Smart / List |
|  | CH+ |  | CH+ / Page+ |
|  | CH- |  | CH- / Page- |
|  | FAV/List |  | Fav / Marker / PC |
|  | Rec |  | Rec / Rec Mode |

 









Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------------------|---|-------------------------------|
|  | Freeze |  | Pause / Step / Freeze |
|  | Guide |  | Guide / EPG / -/-- |
|  | << |  | << / Tune- |
|  | >> / Aspect |  | >> / Tune+ |
|  | >> / Aspect |  | Shift + Picture / Format |
|  | I<< / Cancel |  | I<< / Preset- |
|  | I<< / Cancel |  | Shift + Exit / Cancel / Clear |
|  | >>I / Sub.PG |  | >>I / Preset+ |
|  | Stop / Index |  | Stop / Hold |
|  | Play/Pause / Timeshift |  | Play / Slow |
|  | Tv/Radio |  | TV/Radio / |
|  | Subtitle |  | Subtitle / EQ |
|  | Reveal |  | Eject / Surround |
|  | Size |  | Zoom / Size |
|  | Hold |  | Shift + Stop / |
|  | Text |  | Text / Goto |
|  | Red |  | Red / Netflix / Search |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------|---|-----------------------------|
|  | Green |  | Green / APP / Repeat |
|  | Yellow |  | Yellow / YouTube / Repeat |
|  | Cyan |  | Blue / Prime Video / Random |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

