



Originalfernbedienung Ersatzfernbedienung

|  |              |  |        |
|--|--------------|--|--------|
|  | Rec Pause    |  | Pause  |
|  | CH+          |  | Ch +   |
|  | CH-          |  | Ch -   |
|  | EPG          |  | Guide  |
|  | AV Out/AV In |  | AV     |
|  | 1            |  | 1      |
|  | 2            |  | 2      |
|  | 3            |  | 3      |
|  | 4            |  | 4      |
|  | 5            |  | 5      |
|  | 6            |  | 6      |
|  | 7            |  | 7      |
|  | 8            |  | 8      |
|  | 9            |  | 9      |
|  | 0            |  | 0      |
|  | Tv/Radio     |  | TV/R   |
|  | Recall       |  | Pre Ch |

Originalfernbedienung Ersatzfernbedienung

|  |            |  |       |
|--|------------|--|-------|
|  | Subt       |  | Subt  |
|  | TTX        |  | Text  |
|  | Audio      |  | Dual  |
|  | Menu       |  | Menu  |
|  | Exit       |  | Exit  |
|  | Vol+       |  | Vol + |
|  | Vol-       |  | Vol - |
|  | Mute       |  | Mute  |
|  | Mode       |  | Smart |
|  | Rec List   |  | List  |
|  | Zoom       |  | Eject |
|  | Up         |  | Up    |
|  | Down       |  | Down  |
|  | Right      |  | Right |
|  | Left       |  | Left  |
|  | Enter      |  | Ok    |
|  | Play/Pause |  | Play  |



